


# NOVA LUCE


9030100 9030101 9030102

2X  2X  1X  2X 

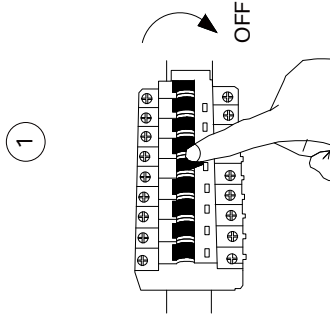


1

Turn off the general switch

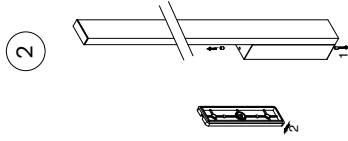


2

Dismantle the product

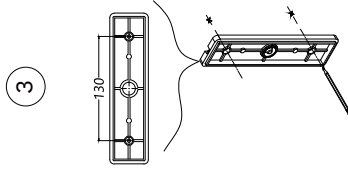


3

Mark where to drill

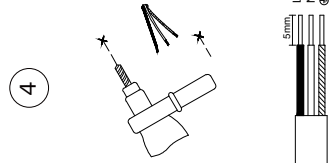


4

Make sure to have the  
Cables in the center

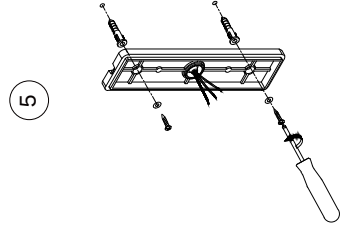


5

Drill holes apply plastic anchors  
With screws

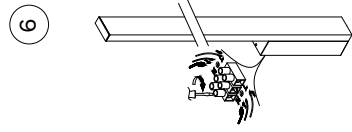


6

Connect wires

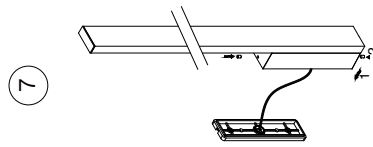

7

Put it in place & apply  
The side nuts

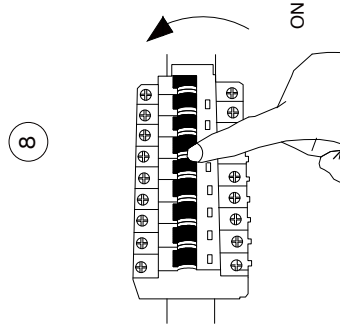

8

Turn on the general switch

